

# DOOR CONTROL SWITCH

## INSPECTION


### 1. INSPECT POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (DOOR CONTROL SWITCH)

(a) Measure the resistance of the door control switch.

#### Standard resistance

Tester Connection	Switch Condition	Specified Condition
2 (L) - 1 (E)	Lock	Below 80 Ω
2 (L) - 1 (E)	OFF	10 kΩ or higher
9 (UL) - 1 (E)	Unlock	Below 80 Ω
9 (UL) - 1 (E)	OFF	10 kΩ or higher

If the result is not as specified, replace the power window regulator master switch assembly.

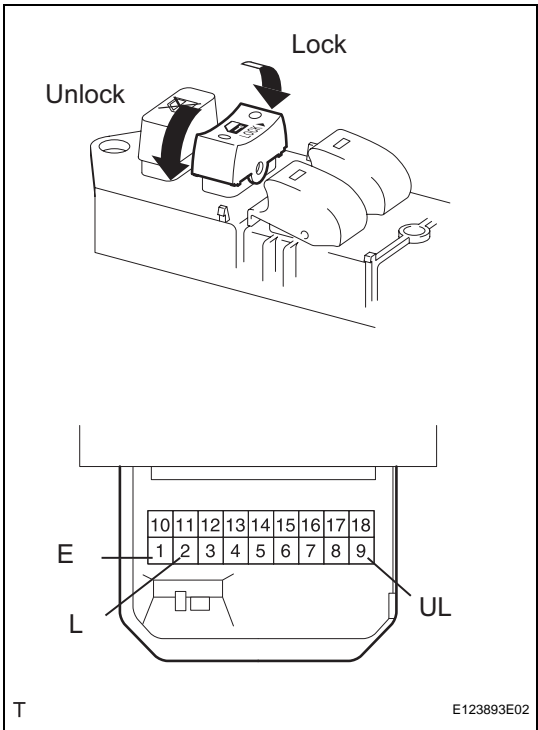

### 2. INSPECT DOOR CONTROL SWITCH ASSEMBLY

(a) Measure the resistance of the door control switch.

#### Standard resistance

Tester Connection	Switch Condition	Specified Condition
4 (L) - 3 (E)	Lock	Below 200 Ω
4 (L) - 3 (E)	OFF	10 kΩ or higher
2 (UL) - 3 (E)	Unlock	Below 200 Ω
2 (UL) - 3 (E)	OFF	10 kΩ or higher

If the result is not as specified, replace the door control switch assembly.

